



Desktop Thermal Receipt Printer

Quick installation Guide

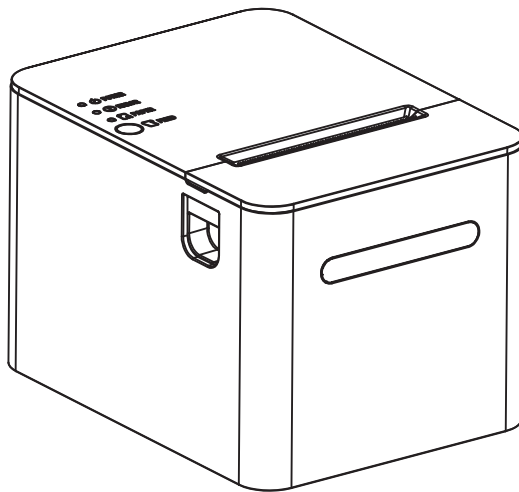

Packing list


Standard fitting

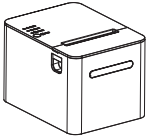


Receipt Printer



 USB Cable



Power adapter

 


Thermal paper roll




Quick installation Guide

Appearance and components


Front view

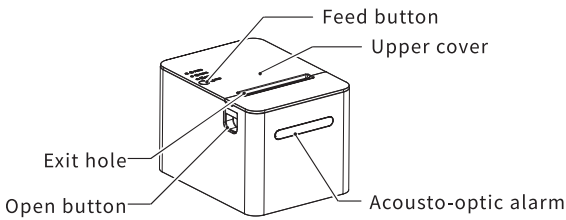


Rear view

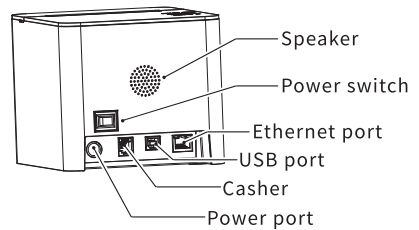

Inside view

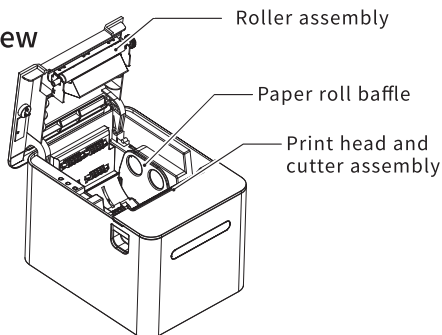


Connect cables

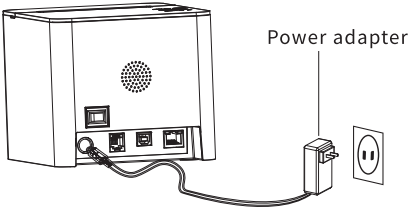

■ Connect the power cable

1. Make sure that the printer power switch is in the off "○" state.
2. Connect the power adapter to the printer.
3. Insert the other end of the power adapter into a nearby socket.

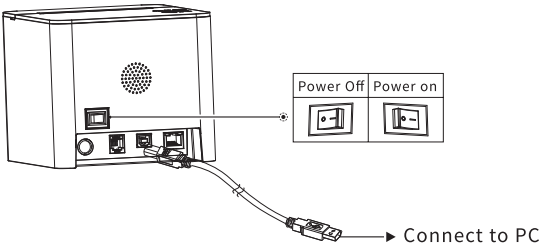



■ Connect a USB cable

1. Connect the USB cable to the printer.
2. Connect the USB cable to the PC.
3. Turn on the power switch of the printer to the - state.


Installation consumables

■ Inner paper roll mounting

1. Put the paper roll into the paper bin in the direction shown. There is no need to use a paper roll (because the paper bin contains a paper roll roller). Move the right guide paper to fix the paper width according to the paper width, and pull the front end of the paper roll out over the rubber roll.

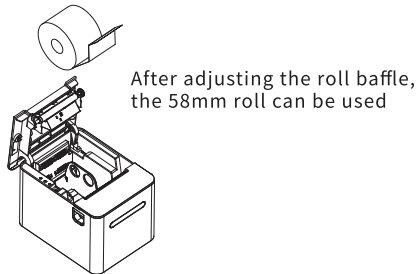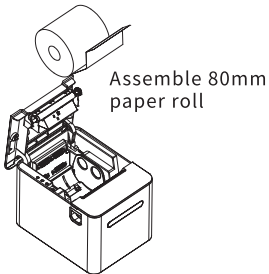

2. Close the cover of the bill machine, and tap downward until you hear a click, indicating that the cover is closed.

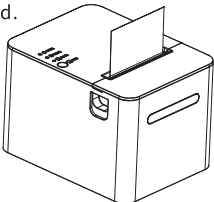

Key Function Description

Button operation	Function description
FEED	Press the FEED button and the printer will travel a certain distance
	Press and hold the FEED button, and the printer keeps moving until you release the button and stop
Print the self-test page	Press and hold the FEED button to start up, automatically print the self-test page, and stop after printing
Factory data reset	After the printer starts up and initializes, press and hold the FEED button for more than or equal to 8s to print "Factory Settings restored successfully" and stop

☺ The illustrations and descriptions used in this document may differ from the actual ones.

Warranty Card

Warranty Instruction

Dear User:

Thank you for choosing our printer products, we provide efficient and high-quality warranty services for the products, please read the following terms carefully and pay attention to the relevant matters.

- The user with the warranty card and purchase documents can enjoy the whole printer warranty service for one year from the date of purchase. During the warranty period, spare parts damage or printer error caused by quality problems can be replaced or repaired free of charge.
- During the warranty period, if there are the following circumstances, you may not enjoy the warranty service:
 - Damage or error caused by improper use of the user;
 - Damage or error caused by disassembly or maintenance by unauthorized companies or users;
 - Damage or error due to force majeure;
 - No warranty or purchase documents, purchase documents and products do not match or alter
- Appropriate charges shall be charged for replacement or repair after the warranty period and for damage or error caused by the contents of Article 2 of this warranty instruction.

Warranty Card			
Product Model		Date of Manufacture	Year Month
Name		TEL	
Address			
Distributor Name		TEL	
Machine Error			